Installation Systems:

Thin-Bed Method

- NobleSeal TS
- · NobleBond EXT
- NobleSealant 150

Full Mortar Bed Method

- · Chloraloy CPE Shower Pan Liner
- · Full Mortar Bed Adapter Kit
- Pro-Slope with Single Slope (coming soon)

Listings & Approvals:

- ICC-ES PMG 1065
- UPC IAPMO File No. 7249





:

Standard Sizes:

*Deduct 3/8" for Tile Top Strainers

Drain Base Length

Strainer Lenath*

Hole Center

Thickness

24" Drain

24"

15-3/4"

B 21-3/4"

D 1-1/4"

32" Drain

32"

29-3/4"

19-1/2"

1-3/8"

36" Drain 40" Drain

40"

37-3/4"

23-3/4"

1-7/16"

36"

33-3/4"

21-3/4"

1-3/8"

48" Drain 54" Drain

54"

51-3/4"

30-3/4"

1-9/16"

48"

45-3/4"

27-3/4"

1-1/2"


60" Drain

60"


57-3/4"

33-3/4"

1-5/8"

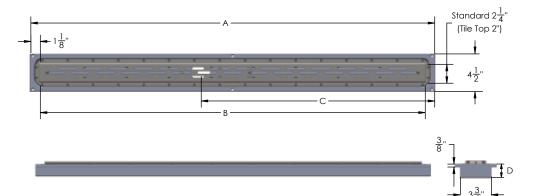

Accessories:

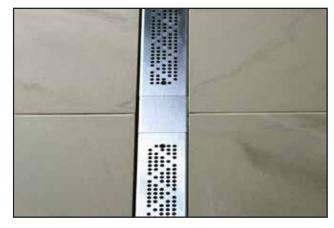

Connector


- Provides a continuous strainer connection between two or more bronte[™] Linear Drains
- 3 Connector types for different drain lengths, see chart below:

Joining to		Drain Size						
		24"	32"	36"	40"	48"	54"	60"
Drain Size	24"	SCK-13						
	32"	SCK-13	SCK-13					
	36"	SCK-13	SCK-13	SCK-13				
	40"	SCK-14	SCK-14	SCK-14	SCK-15			
	48"	SCK-13	SCK-13	SCK-13	SCK-14	SCK-13		
	54"	SCK-13	SCK-13	SCK-13	SCK-14	SCK-13	SCK-13	
	60"	SCK-14	SCK-14	SCK-14	SCK-15	SCK-14	SCK-14	SCK-15
	SCK-13			SCK-14			SCK-15	




Full Mortar Bed Adapter Kit


- · For use with full mortar bed installations
- Smooth Sided Dam protects Mud Bed erosion due to chemicals and debris
- Recommended use with Chloraloy® shower pan liner or Pro-Slope™ Single Slope base (coming soon)

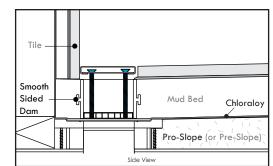








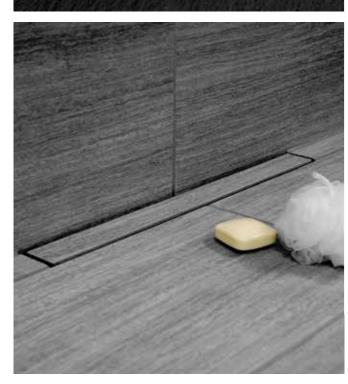

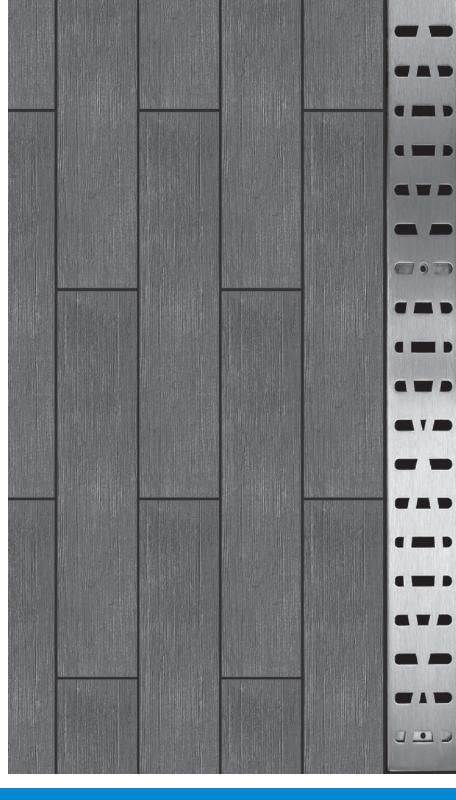

www.brontecollection.ca






bronte[™] Linear Shower Drain System

Design Creativity

- Contemporary styling with a selection of six drain lengths and brushed stainless steel or tile top strainer grates
- · Allows the use of larger tiles for greater design flexibility
- Low profile ideal for barrier free applications

Strainer Grate Designs (top to bottom): Pyramid[^], Slotted, Wave, Cross-Hatch & Tile Top. (^Pvramid strainer complies with ADA guidelines for handicapped accessible showers.)

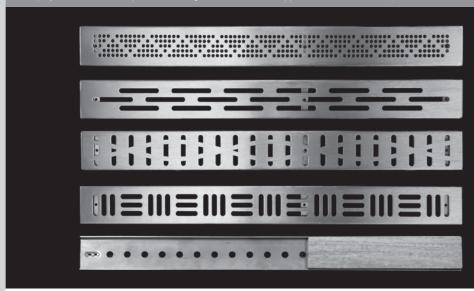



* Custom Drains can be produced when minimum quantity is met. Please contact your bronte™ Representative or bronte™ Sales Department for more information.

Applications:

- · Residential New Construction & Remodeling
- Off-set inlet location designed for use with standard floor joists
- Easy installation with no substrate modification needed
- Healthcare Facilities
- Ideal for use in barrier-free/ADA showers
- One-piece base construction with low profile and no seams
- Hospitality
- Customizable drains* for large projects
- Install at thresholds or exits for overflow control
- Multiple Shower Areas
- High capacity up to 36 USGPM (136 I/min)
- Removable internal strainer for ease of maintenance
- Exterior Decks
- Connect multiple drains to span longer areas, such as pool decks
- Drain materials are suitable for use outdoors





Installation Versatility

- · Rough-in (Base) and Trim (Grate) sold separately
- Easy to install: Just fasten the Freestyle Linear
 Drain to the floor, tie in the plumbing, and attach membrane clamping mechanism
- Flat bottom and internal slope
- Complete installation systems
- Use with NoblesSeal TS for the most dependable waterproofing
- Use with Chloraloy and Full Mortar Bed Kit for a traditional full bed method installation, or Single Slope Pro-Slope (coming soon).





